


Connecting your Xbox to a Bass Shaker System

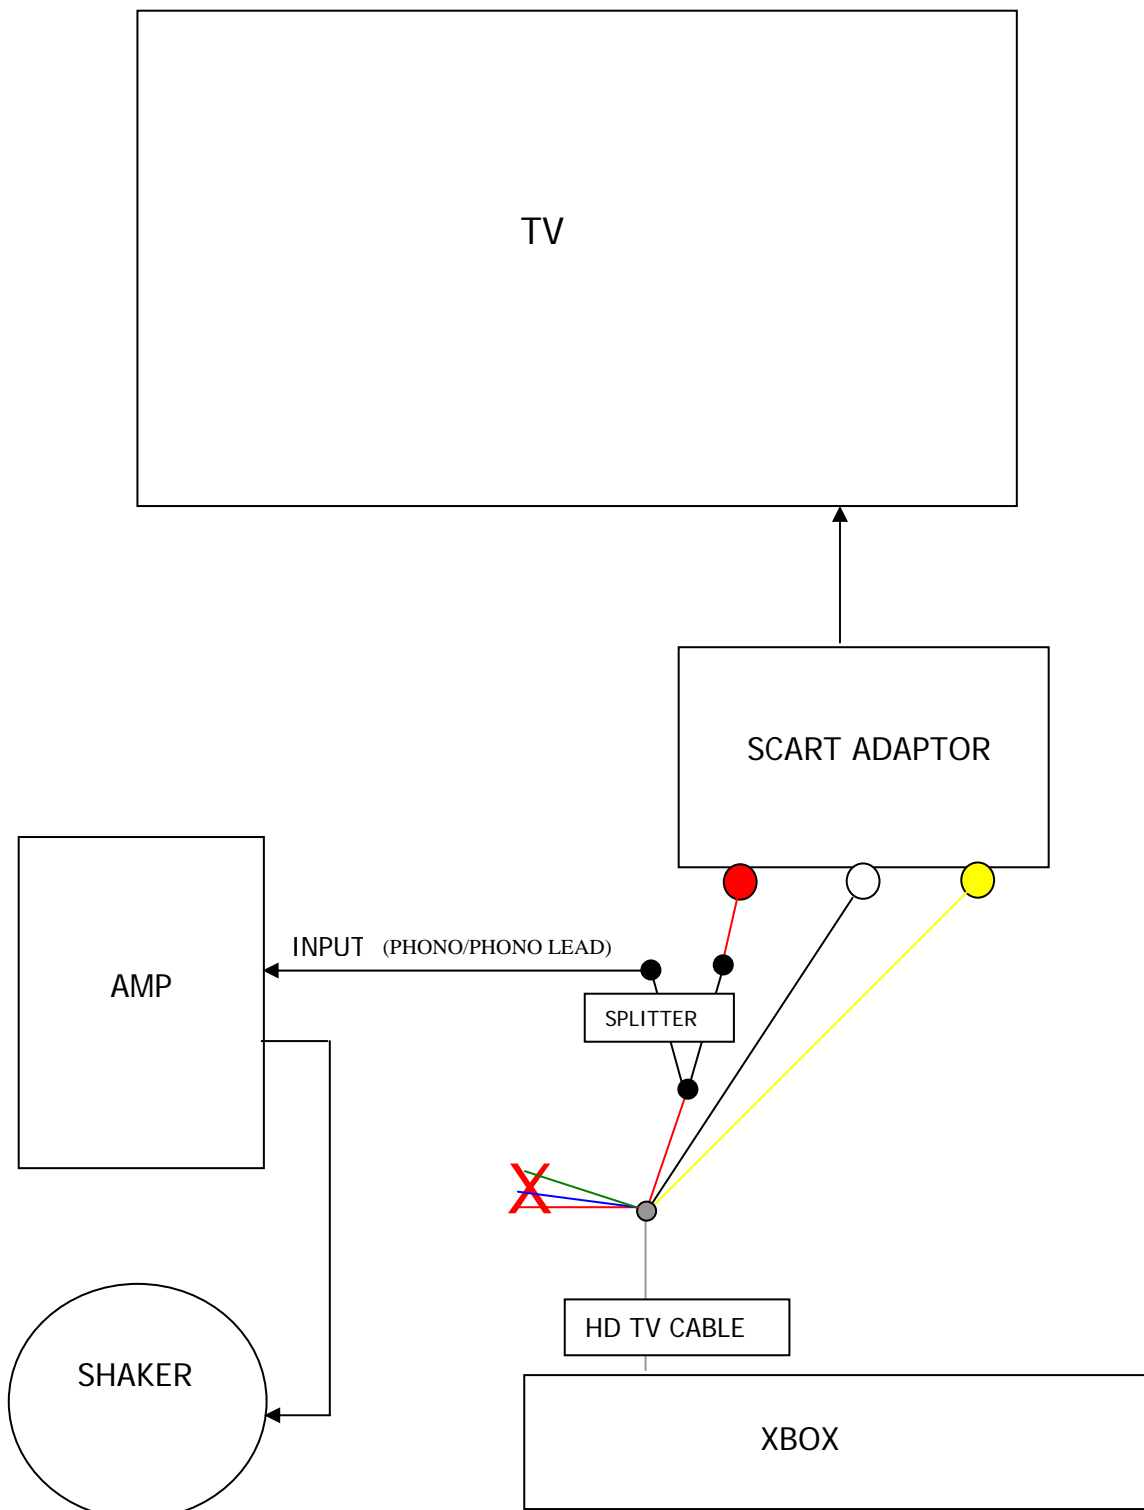

Standard TV Configuration:

Plug the red audio connector (solid not banded) of the HD AV cable into the female end of the splitter cable. One leg of the splitter then plugs into the red audio input of the Scart Adaptor, the other leg plugs into the input of the amplifier using the supplied phono extension lead. *Ignore the 3 Video group leads on the HD AV cable.